



## Sheerline® gutter

### Stylish gutter and capping

The SHEERLINE® fascia gutter system from BlueScope Lysaght features concealed fixing and is designed for greater durability, longer life and compatibility with steel and tile roofs.

Manufactured from light, strong, high-tensile G550 ZINCALUME® steel or pre-painted COLORBOND® steel, LYSAGHT SHEERLINE is fast and easy to install and comes in long lengths that match BlueScope Lysaght's roofing and walling profiles perfectly.

The ZINCALUME® steel or COLORBOND® steel used for SHEERLINE can last up to four times as long as galvanized gutter under similar conditions, and its strength helps reduce possible damage during transit and installation.

With the choice of optional slotting to allow overflow where alternative overflow devices are not installed, as well as all the components needed for a perfect finish, LYSAGHT SHEERLINE is an extremely flexible gutter system.

#### SHEERLINE Components

Gutter; Capping; Clips; End stops; Corners; Downpipe; Accessories.



Rainwater Products



Structural Products



Fencing Products



Home Improvements



Roofing & Walling Products



House Framing Products



Customer Support

# SHEERLINE gutter and capping

LYSAGHT SHEERLINE® gutter is concealed-fixed, and is available slotted or unslotted. It is favoured by some for high-profile roofing (e.g. KLIP-LOK®) laid at low pitches.

Finishes: standard and high-gloss COLORBOND® colours.

SHEERLINE is not available in Queensland, and the slotted product is not available in Western Australia.

In the Northern Territory it is also known as Square Profile.

SHEERLINE capping is available for trimming roof edges at barges.

Dimensions other than in South Australia

A = 81 mm (nominal)  
B = 141 mm (nominal)  
C = 124 mm (nominal)

Dimensions in South Australia

A = 72.5 mm (nominal)  
B = 141 mm (nominal)  
C = 124 mm (nominal)

Western Australia

Stock lengths are 6 and 8 metres, or custom cut lengths up to 8m.

COLORBOND® steel colours and unpainted ZINCALUME® steel available.

## Fall


Install gutters with a suitable fall to avoid ponding and to allow water to easily flow away. Steeper falls are preferred for prolonged life of the gutter. Refer to the BCA and the Australian Standards for guidance.

## Disclaimer, warranties and limitation of liability


This publication is intended to be an aid for all trades and professionals involved with specifying and installing Lysaght products and not to be a substitute for professional judgement. Terms and conditions of sale available at local BlueScope Lysaght sales offices.

Except to the extent to which liability may not lawfully be excluded or limited, BlueScope Steel Limited will not be under or incur any liability to you for any direct or indirect loss or damage (including, without limitation, consequential loss or damage such as loss of profit or anticipated profit, loss of use, damage to goodwill and loss due to delay) however caused (including, without limitation, breach of contract, negligence and/or breach of statute), which you may suffer or incur in connection with this publication.


© Copyright BlueScope Steel Limited May 12 2008

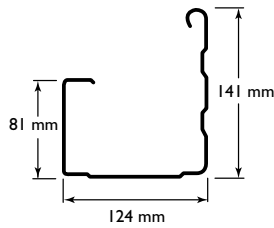


Gutter (All states except SA)

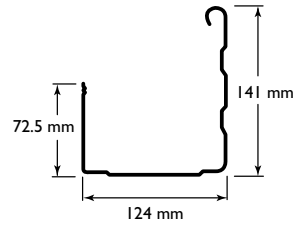


Gutter (SA only)

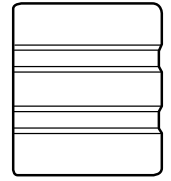


Stop end

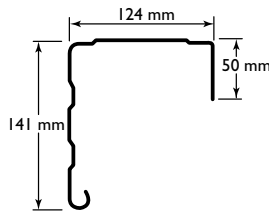

Capping (All states)

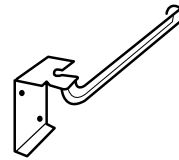

General purpose gutter clip



SGCI gutter clip

## Roof drainage system design

Roof drainage systems should be designed and detailed by a suitably qualified trade or professional in accordance with the BCA and the Australian Standards. Particular reference should be made to the correct sizing of gutter; sizing, quantity and placement of downpipes; and the provision of appropriate overflow devices. Guidance is available in our publication Using Lysaght Roofing & Walling (Section 6 – Roof Drainage).

## Adverse conditions

If these products are to be used within 1km of marine, severe industrial, or unusually corrosive environments, ask for advice from our information line.

## Installation Advice

The roof drainage system should be installed using good trade practices and by a certified plumber.

For sealed joints use screws or rivets and neutral-cure silicone sealant branded as suitable for use with galvanised or COLORBOND/ ZINCALUME® steel.

## Clean up

Remove all plastic cover strips from product and dispose of correctly.


Sweep all metallic swarf and other debris from roof areas, gutters, downpipes, overflow devices and all other roof drainage components, at the end of each day and at the completion of the installation.

## Maintenance

The roof drainage system (gutter, downpipes, overflow devices and all other components) must be cleaned out on a regular basis.

Refer to our publication Maintenance Manual for Roofing & Rainwater Goods.

**NOT AVAILABLE IN QUEENSLAND**

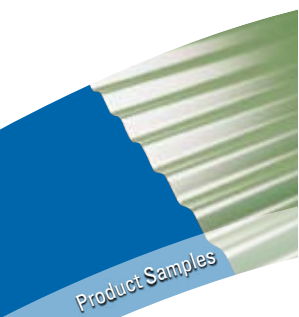

Product Samples



Product Literature



Warranties



Technical Support



Online Information



Information, brochures and your local distributor **1800 641 417**

Please check the latest information which is always available at [www.lysaght.com](http://www.lysaght.com)

LYSAGHT, SUPAZED, SUPACEE and GALVASPAN are registered trademarks of BlueScope Steel Limited, ABN 16 000 011 058.

The LYSAGHT® range of products is exclusively made by BlueScope Steel Limited trading as BlueScope Lysaght.

Printed by BMP 2M0508



# Water Overflow & Residential Gutters

## Notes on the effective Design, Detailing , Installation and Maintenance of Residential Roof Drainage Systems

Under the Environmental Planning and Assessment Act 1979 and its Regulations, all building work must be carried out in accordance with the Building Code of Australia (BCA). In addition to referring to Australian Standards AS/NZS 3500.3 (2003), and AS/NZS 3500.5 (2000), the BCA also contains requirements for the disposal of surface water in Volume One, in Performance Requirements FP1.2 and FP 1.3, and in Volume Two, in Part 3.5.2, namely, Performance Requirement P2.2.1 and Clauses 3.5.2.1.and 3.5.2.4.

The most common means to satisfy these requirements for roof drainage (ie. guttering) installations is via compliance with the National Plumbing and Drainage Code AS/NZS 3500.3 - 2003.

Furthermore, in each state and territory it is necessary to satisfy the relevant regulation. For example, the NSW Code of Practice for Plumbing and Drainage (2006) adopts AS/NZS 3500.3-2003 and associated amendments. (Further information is available at [www.deus.nsw.gov.au/water/plumbing.asp](http://www.deus.nsw.gov.au/water/plumbing.asp))

In the design and detailing of a roof drainage system consideration must be given to a range of the factors such as rainfall intensity, roof catchment area, gutter size/capacity, gutter fall, gutter outlets (sumps, rain-heads, nozzles), downpipe size, quantity and placement, overflow consideration, material selection, jointing, etc.

For residential roof drainage systems high fronted gutters are a popular aesthetic choice to hide the lower edge of tiles or roof cladding. Some simple overflow methods that can be employed on high fronted gutters are listed below;

- A) Methods related to the design and installation of roof drainage systems ;
- Slotted front of gutter - a simple and popular choice which allows for water overflow through the slots visible on the front face of the gutter.
  - Specifically located overflows as permitted in the BCA ie;
  - Inverted downpipe drop/pop at high points in the gutter but set at a level below the fascia top.
  - Stop ends cut down to a lower level to act as a weir. Stop ends weirs could be hidden at the high

point of the gutter and designed as part of an expansion joint.

- Rain-heads with overflow weir
- Holes, slot, or weir at downpipes
- Gap between the fascia and the gutter back – a packer is inserted between the gutter back and the fascia

or any of a number of other proprietary systems and trade solutions.

B) Methods related to alternative building designs methods;

- Unlined eaves - eliminates the issue where the house design suits.
- Gutter installed such that the gutter front is fully below the top of the fascia.
- Design for a higher rainfall intensity, as used for internal box gutters.
- Back flashing - where gutter support brackets allow back flashing installation (eg external brackets).

The detailing and sizing of the selected overflow method/s is normally completed by the designer/installer, but must be adequate for the situation and must meet the relevant performance requirement of the BCA and Australian Standards.

While there may be some variations from state to state, contractors who install guttering systems are generally required to hold an appropriate licence. In NSW, for example, a licence in the category of Builder, Plumber or Roof Plumber issued by the Office of Fair Trading is required and it is an offence to undertake this work without an appropriate licence. The work is required to comply with the appropriate codes and standards. Statutory warranties normally apply and consumers have a right to lodge a complaint and have it dealt with by the appropriate authority. In NSW, for example, the statutory warranty is 7 years under the Home Building Act.

# Water Overflow & Residential Gutters

In the installation of the roof drainage system, particular focus should be given to the following;

- Attention to the use of compatible materials for drainage system components, leaf-guard type system components and compatible fasteners/sealants to connect and seal the components
- The position of the gutter in relation to the fascia
- Installation of the specified gutter and downpipes, ensuring that downpipes are installed in the correct locations and numbers.
- Gutter fall, ensuring sufficient fall and that it is in the direction of the downpipes.
- Overflow has been considered and specific details are installed where required (such as when the gutter front is higher than the top of the fascia).
- During the installation all debris and loose waste materials (swarf, fasteners, etc) must be cleaned off at the end of each day and at the completion of the installation to prevent blockages of the drainage system or deterioration of the individual components. Any protective films should also be removed as part of the installation process.

In the longer term, the ability of a roof drainage system to handle overflow will also depend on the regular cleaning of the system. For example the removal of plant or animal matter (leaves, fungal growth, dropping, nests, etc.) and debris from gutters, leaf-guard type systems and the gutter overflow devices to ensure free drainage of water.

To ensure a long life the roof drainage system the maintenance requirements of the roof drainage system should be forwarded to the occupier/owner of the building and should be fulfilled. Adequate maintenance is a requirement of rainwater good warranties.

## Disclaimer, warranties and limitation of liability

This publication is intended to be an aid for all trades and professionals involved with specifying and installing Lysaght products and not to be a substitute for professional judgement.

Terms and conditions of sale available at local BlueScope Lysaght sales offices.

Except to the extent to which liability may not lawfully be excluded or limited, BlueScope Steel Limited will not be under or incur any liability to you for any direct or indirect loss or damage (including, without limitation, consequential loss or damage such as loss of profit or anticipated profit, loss of use, damage to goodwill and loss due to delay) however caused (including, without, limitation, breach of contract, negligence and/or breach of statute), which you may suffer or incur in connection with this publication.

© Copyright BlueScope Steel Limited May 11, 2008



Information, brochures and your local distributor **1800 641 417**

Please check the latest information which is always available at [www.lysaght.com](http://www.lysaght.com)

LYSAGHT is a registered trademark of BlueScope Steel Limited, ABN 16 000 011 058. The LYSAGHT® range of products is exclusively made by BlueScope Steel Limited trading as BlueScope Lysaght. Printed 05/08. Printed by BenchMark Press 2k

